
INSTALL GUIDE · COBBLESTONE DRIVEWAY

Building a cobblestone driveway

Five steps to a driveway that carries cars for generations. A job for a pro.

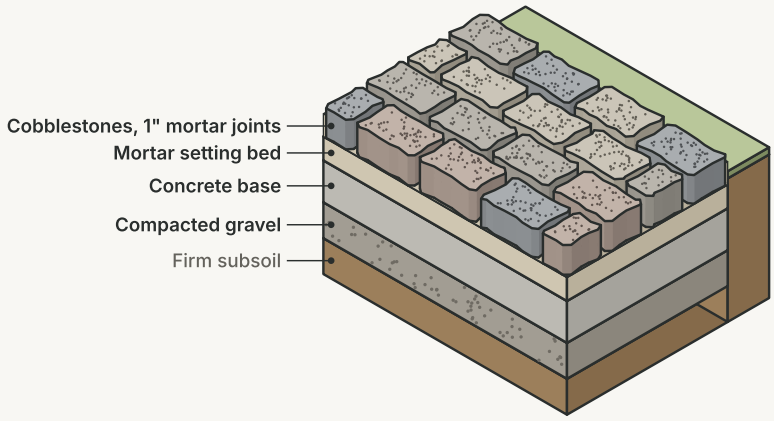


Driveway or walk?

	DRIVEWAY	WALK OR PATIO
Base	Compacted gravel + concrete	Compacted gravel
Setting bed	Mortar on the concrete	Sand or stone dust
Joints	1", filled with mortar	1", stone dust or coarse sand


Why concrete? Cars turn and brake here. A rigid bed stops stones shifting or sinking.

1 Dig

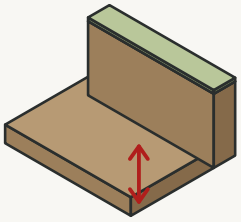


Dig out at least 12". Remove any old asphalt or concrete completely.

2 Gravel base

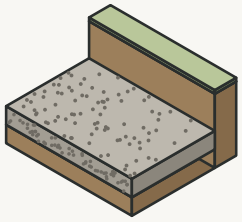


Lay a thick layer of gravel and compact it for stability and drainage.

3 Concrete base

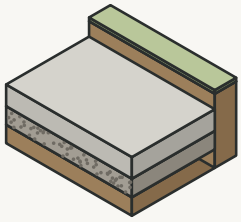


Pour a concrete base over the gravel so the drive can't sink or shift.

4 Set the stones

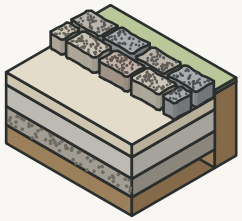


Bed each stone in mortar and tap it to height. Keep 1" joints.

5 Fill the joints

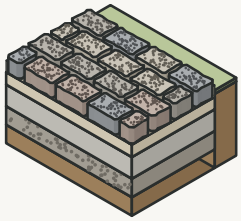

Fill the joints with mortar to lock every stone in place.

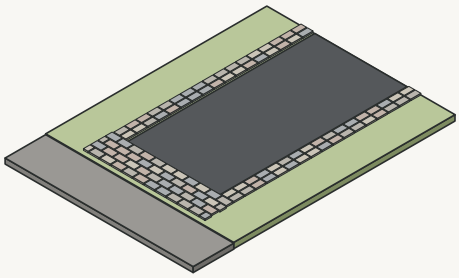

Budget tip

Put cobblestones where they show most: an apron at the street and borders along the edges, with asphalt in the middle.

It can cut the total cost roughly in half.

Keep it looking good

- ✓ **Sweep often**
  Keep leaves and grit out of the joints.
- ✓ **Wash on low pressure**
  Never blast straight into the joints.
- ✓ **Skip the sealer**
  Granite resists stains and needs to breathe.

Three ways to buy

Reclaimed New York cobblestones · pallet coverage with 1" joints

A sample

One stone of any size, so you can see it on your own site.

By the stone

Any number, from just one. Good for repairs and aprons.

By the pallet

	Jumbo	Regulation	Jumbo XL	Cube
Stones	120	178	120	90
Covers	80 ft²	74 ft²	97 ft²	40 ft²

Count your stones
Scan for the calculator

Chief Bricks · 15 Fisher Ave, Nanuet, NY 10954 · (718) 379-1232 · chiefbricks.com